# ARM078 Washbasin mixer

ARM078 Chrome

### **Article Number**

ARM078 Chrome - 9424415 ARM078 Matte Black - 9424416 ARM078 Polished Brass - 9424417 ARM078 Copper - 9424418 ARM078 Bronze - 9426090 ARM078 Black Chrome - 9424419 ARM078 Honey Gold - 9424420 ARM078 Brushed Black Chrome - 9424421 ARM078 Brushed Nickel - 9424422

Basin faucet with tall turnable spout. Combine with pop-up waste 74400  $\rightarrow$ .

Our wash basin taps combines advanced technology, exquisite design, and top-notch performance to offer you the ultimate bathroom upgrade. With its sleek and modern appearance, it effortlessly enhances the visual appeal of your wash basin, becoming a focal point that exudes elegance and sophistication in a range of different finishes.



### Cleaning

Wipe the surface with a soft cloth and lukewarm water and possibly with soap solution. Avoid alkaline, acid-liming or abrasive cleaners.

Brass is a material that over time gets a beautiful patina but can be polished with brass polish. Copper also gets patina but should not be polished. The other shiny surfaces retain their luster.

### Decalcification

Aerators and shower handles should be regularly decalcified by placing them in a vinegar bath for a couple of hours. Should limescale stains occur, use eucalyptus oil and a soft cloth.

### Lubrication

Lubricate only with silicone grease.

#### Maintenance

Visit our YouTube channel  $\rightarrow$  where there are instructional videos for changing the ceramic cartridge, changing aerators and more.


### **Specifications**


Connection inlet - Flexible hose with 3/8" nut Number of grips - One grip Number of outgoing connections - 1 Dimension inlet - 10 mm alt. 3/8" Length protrusion outlet head - 185 mm Turnable head - Yes

### **Dimensions/Weight**

Package - Depth - 490 mm Package - Width - 280 mm Package - Height - 80 mm

## Tapwell Drawing - PDF

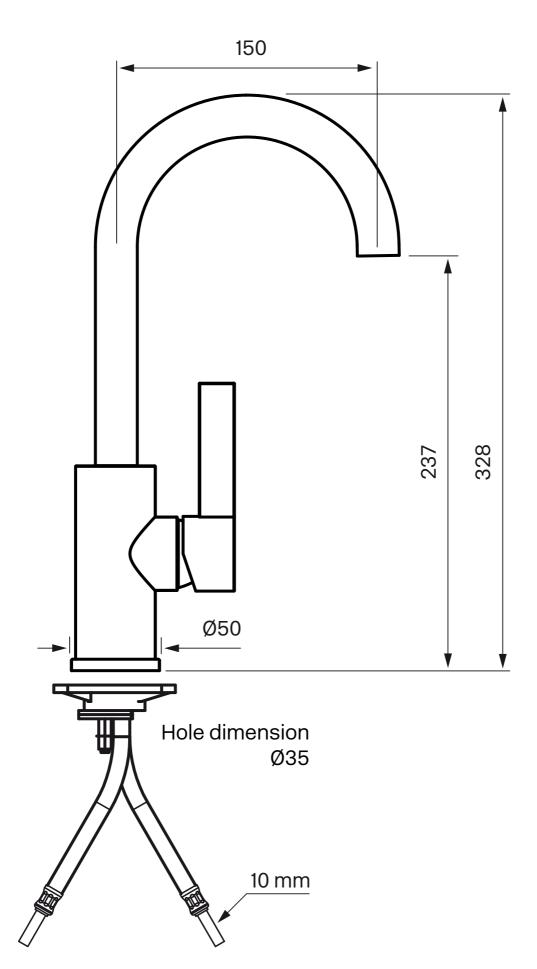

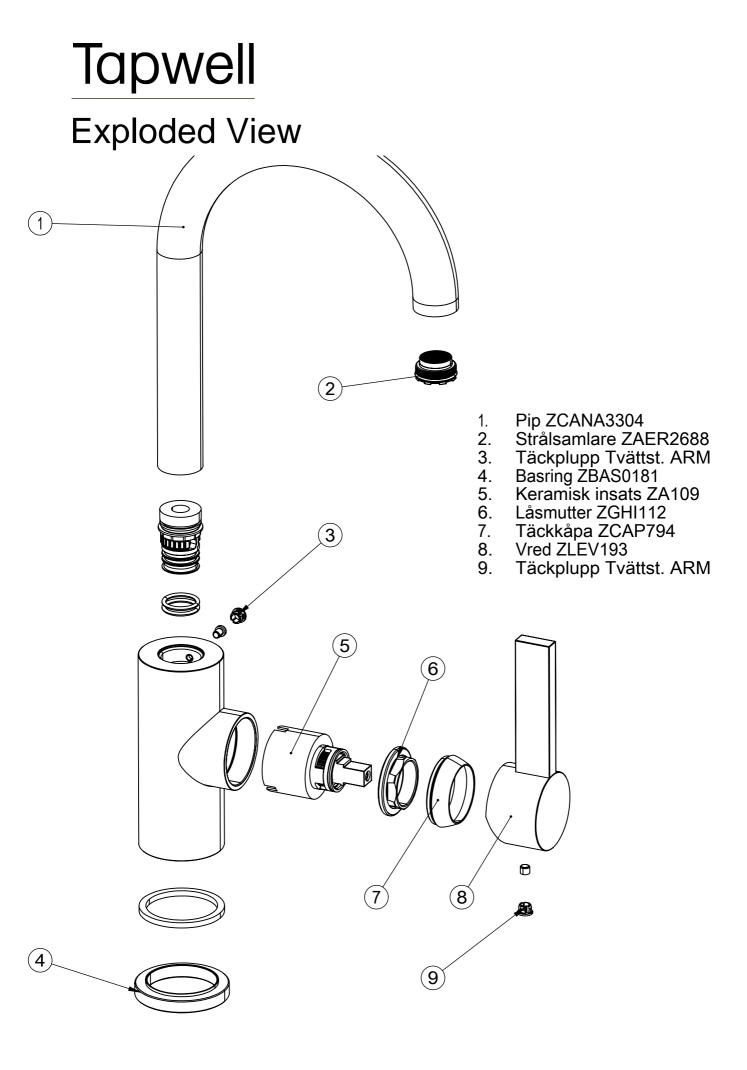


### Replace ceramic insert

The ceramic disc needs to be replaced if the outlet spout or the water flow and temperature adjuster lever drip.

### Article description:

- 1. Faucet body
- 2. Ceramic cartridge
- 3. Locking nut for the ceramic cartridge
- 4. Cover cap
- 5. Lever handle
- 6. Locking screw for the lever handle
- 7. Cover plug

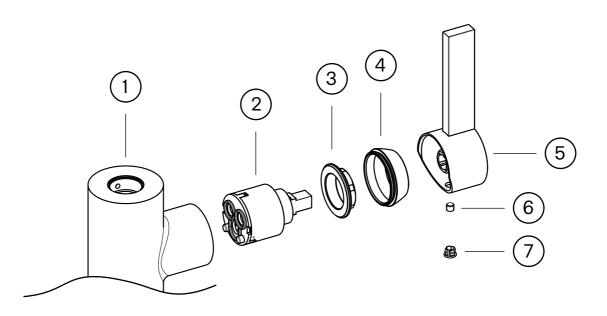

### Working order:

### NOTE - the water to the main line must be turned off!

1. The water to the mixer (1) is turned off and the mixer opened to drain off the water.

2. Pry off the cover plug.

3. The locking screw (6) that holds the lever handle (5) is loosened about 1 turn using an Allen key (2,5 mm alt. 3 mm) and the lever handle is removed by hand.

4. The cover cap (4) is unscrewed by hand.

5. The locking nut (3) for the ceramic cartridge (2) is unscrewed with a fixed wrench.6. The ceramic cartridge (5) is pulled out by hand and the cartridge seating in the mixer

housing is then carefully cleaned of any particles and limescale. Rinse the mixer.


7. Put the new cartridge in place. During assembly, the cartridge must be turned to the position where the guide pins in the bottom are secured in the corresponding outlets in the bottom of the mixer housing.

8. Reassemble in the reverse order.

## Pressure drop diagram

FLOWCHART

ARM078

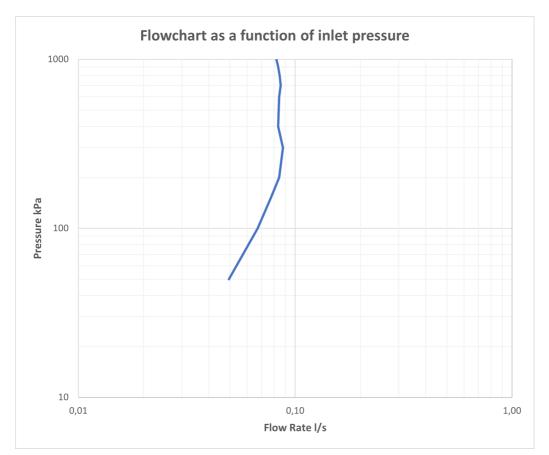

### DATA

Pressure (kPa)	Flow lit/min	Flow lit/s
50	3,0	0,05
100	4,0	0,07
150	4,6	0,08
200	5,1	0,08
300	5,3	0,09
400	5,0	0,08
500	5,0	0,08
600	5,1	0,08
700	5,1	0,09
800	5,1	0,08
900	5,0	0,08
1000	4,9	0,08